



# Truma Aventa

## Quick Reference Functions & Modes

### Remote Control Buttons



**Mode** - Select operating modes.



**Fan** - Set operating fan level.



Low



Med



High



**On/Off Switch**



**Temp Adjustment** (+ or -) °F or °C



**Time** - Show/Set time



**Night** - Quiet mode



**Dehumidify** - Dehumidify A/C



**Timer** - Switch timer on and off.



**Hours** - Set hours



**Setup**



**Min (+ or -)** - Set minutes




**Resend** - Send last settings



**Reset**

# Remote Display Panel & Modes

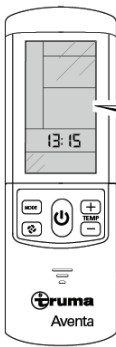

## Cooling Mode

The room air is dehumidified and cooled.



## Night Mode

Both interior and exterior fans run at low speed keeping it quiet.



## Dehumidify

Reduces humidity in the room.

auto

## Automatic Mode

Set temperature reached using the most efficient fan level.



## Circulating Air Mode

Interior air is circulated and cleaned by the filters.

Find more  
resources here

