

Folding bed*

(Wave, Wave SL)

The bench seat of your vehicle is equipped with a folding bed.

There is enough space for two people on the folding bed'. When not in use, it can be fold-ed away behind the bench seat.

Fig.: Folding bed for two additional people



To fold out the folding bed*:

- Turn both front seats toward the rear. Push them forward all the way and also tilt the backrests all the way to the front.
- Tilt the armrests upward.

Fig.: Turning the seats and pushing the seats and backrests toward the front



- Remove the headrests on the bench seat. – When pulling them out, press down the locking elements on the driver's side of the headrests.

Fig.: Pulling out the headrests on the seat bench



- Set the headrests aside, for example in the compartment above the front seats.

Fig.: Setting the headrests aside safely



- Unlock the bench seat. Grasp behind the backrest with the other hand and pull it forward.

Fig.: Unlocking the seat bench and pulling the backrest forward



- Grasp behind the backrest with the other hand and pull it forward until the folding bed* is opened halfway.

Fig.: Opening the folding bed* halfway



- Change your grip so that your right hand grasps the front part of the folding bed*.

Fig.: Holding the front part with your right hand



- Grasp the rear part of the folding bed* with your left hand and slowly lower both parts.

Fig.: Lowering the front and rear parts



- Remove the securing rod from its holder under the bench seat. Insert it in the provided hole so that the bedspace does not collapse.

Fig.: Inserting the securing rod

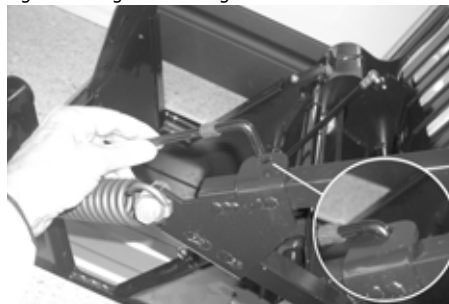


Fig.: Folded-out folding bed*



To fold it together:

- Proceed in reverse order. Observe that you cannot always grasp the parts of the bench seat securely, especially when the folding bed* has been folded together halfway.
- Lock the bench seat again afterward.